





RIMINI SOLSÄNG

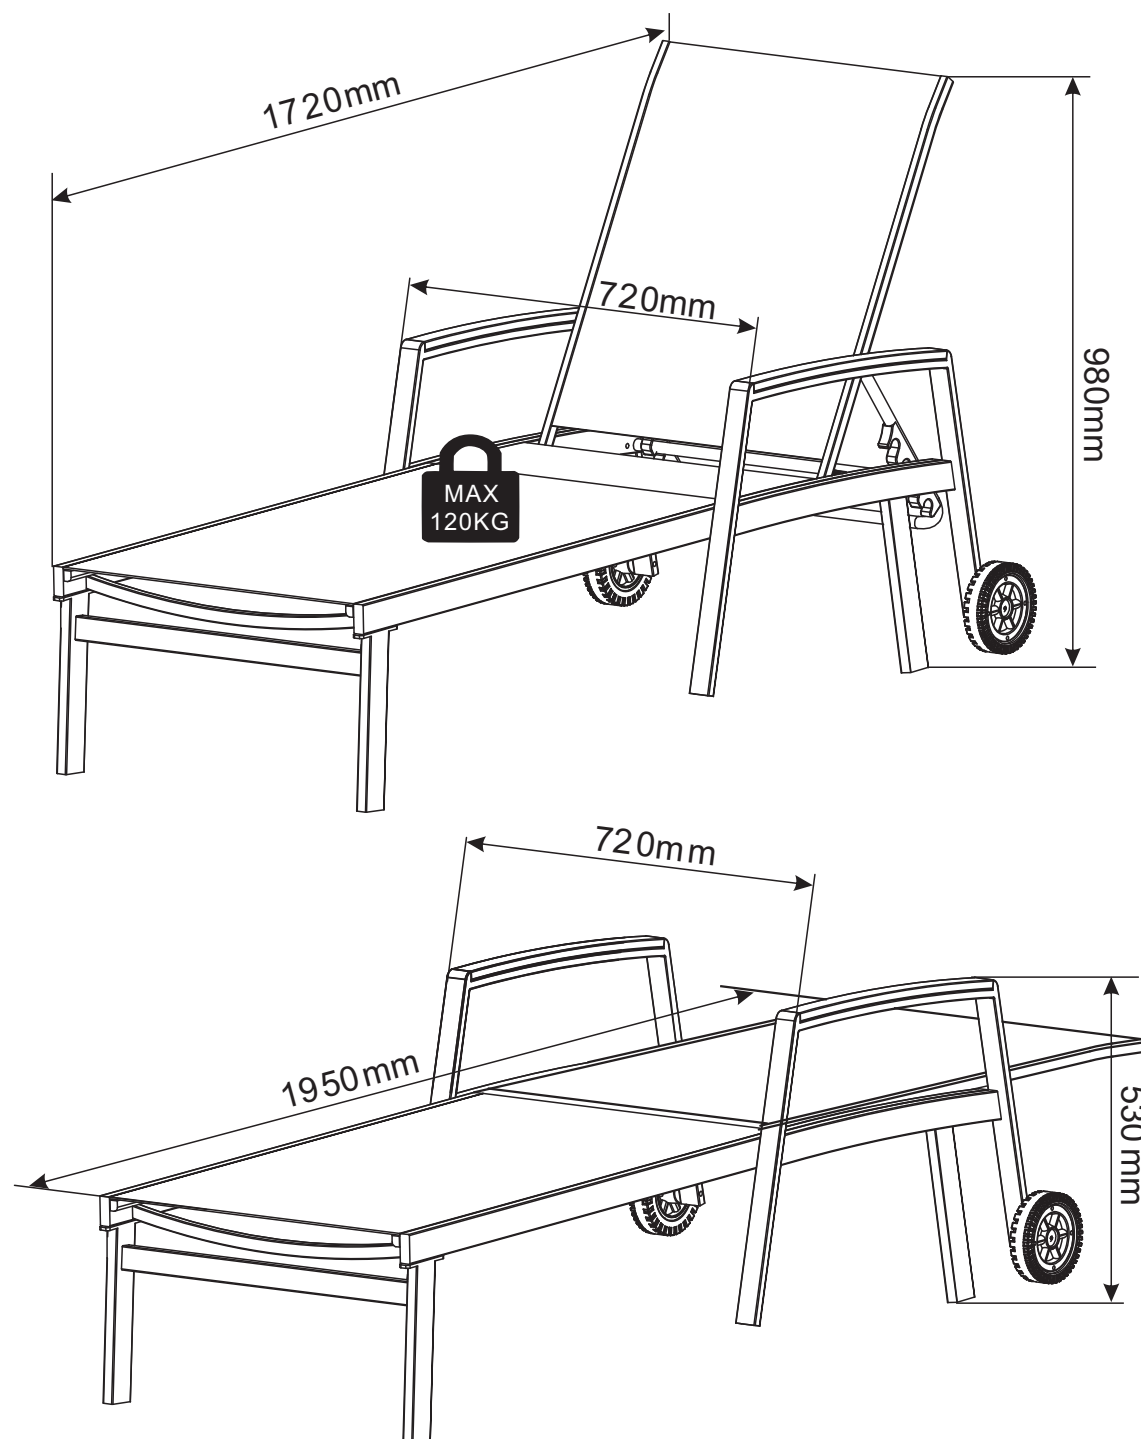

Först sätt i alla skruvarna i hålen, sedan dra åt dem

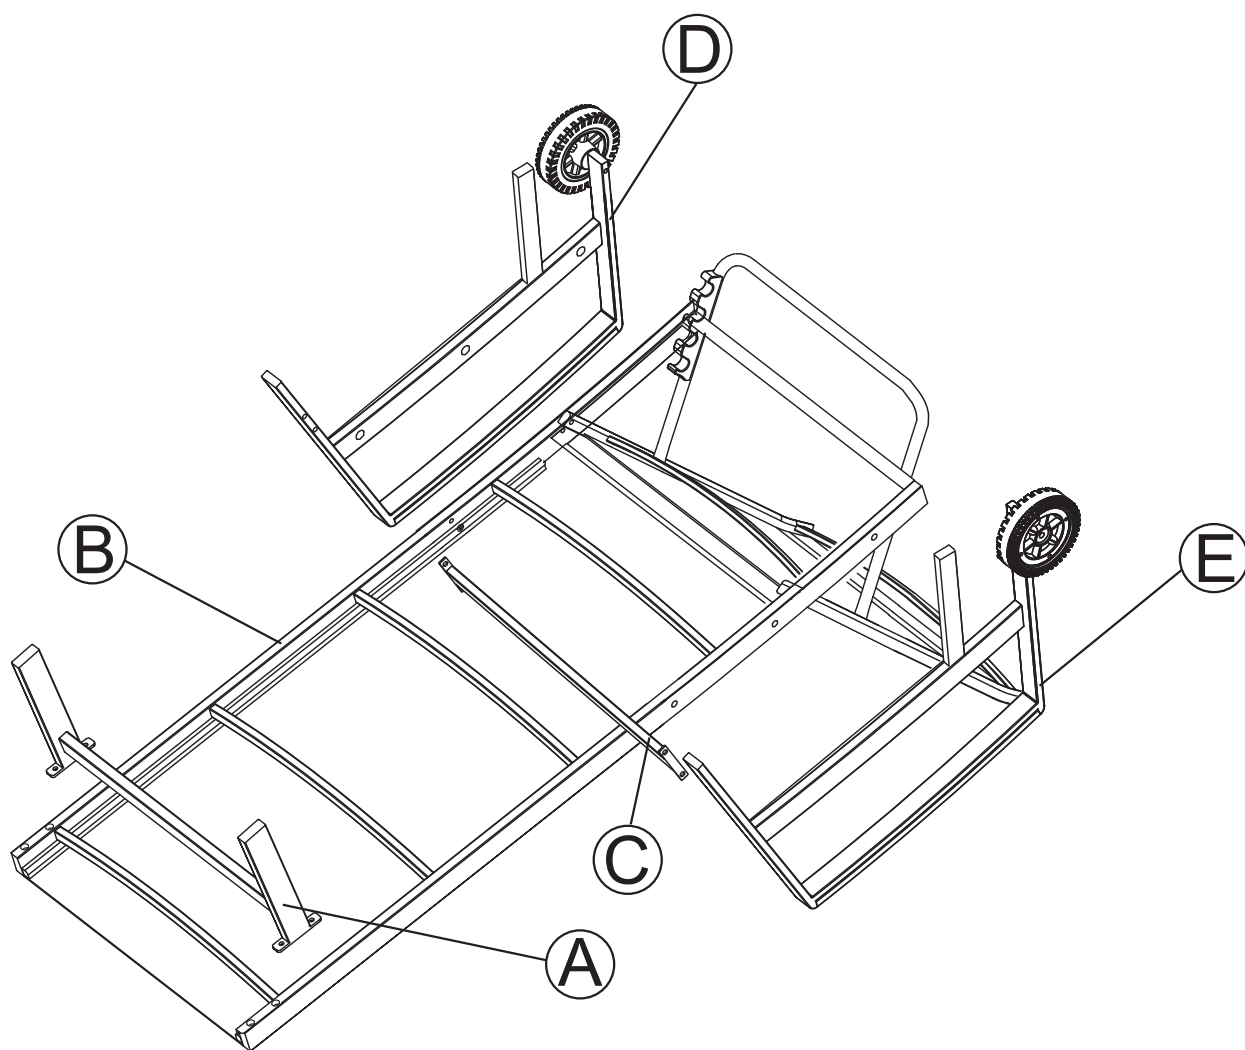

A	1PC	D	1PC
B	1PC	E	1PC
C	1PC		

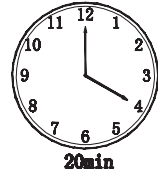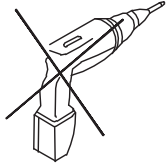

M6X20mm

8 * B1



M6X35mm

6 * B2



Ø 16X1.5mm


14 * B3




4mm


1 * B4

 4mm 1*B4	 M6X20mm 4*B1	 Ø 16X1.5mm 4*B3
--	--	--

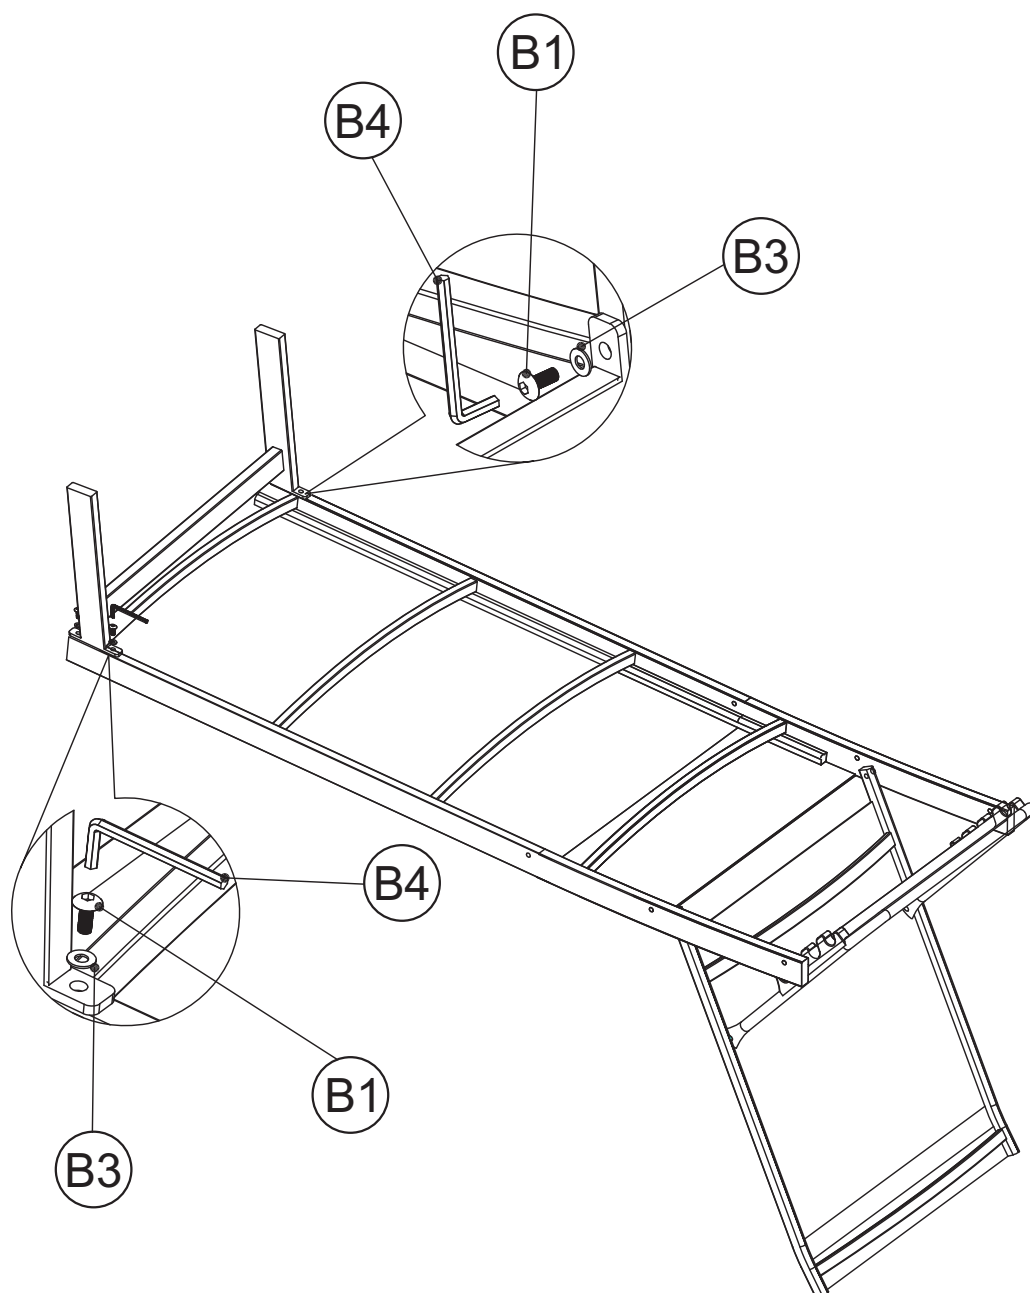

 4mm	 M6X35mm	 Ø 16X1.5mm
1*B4	6*B2	6*B3

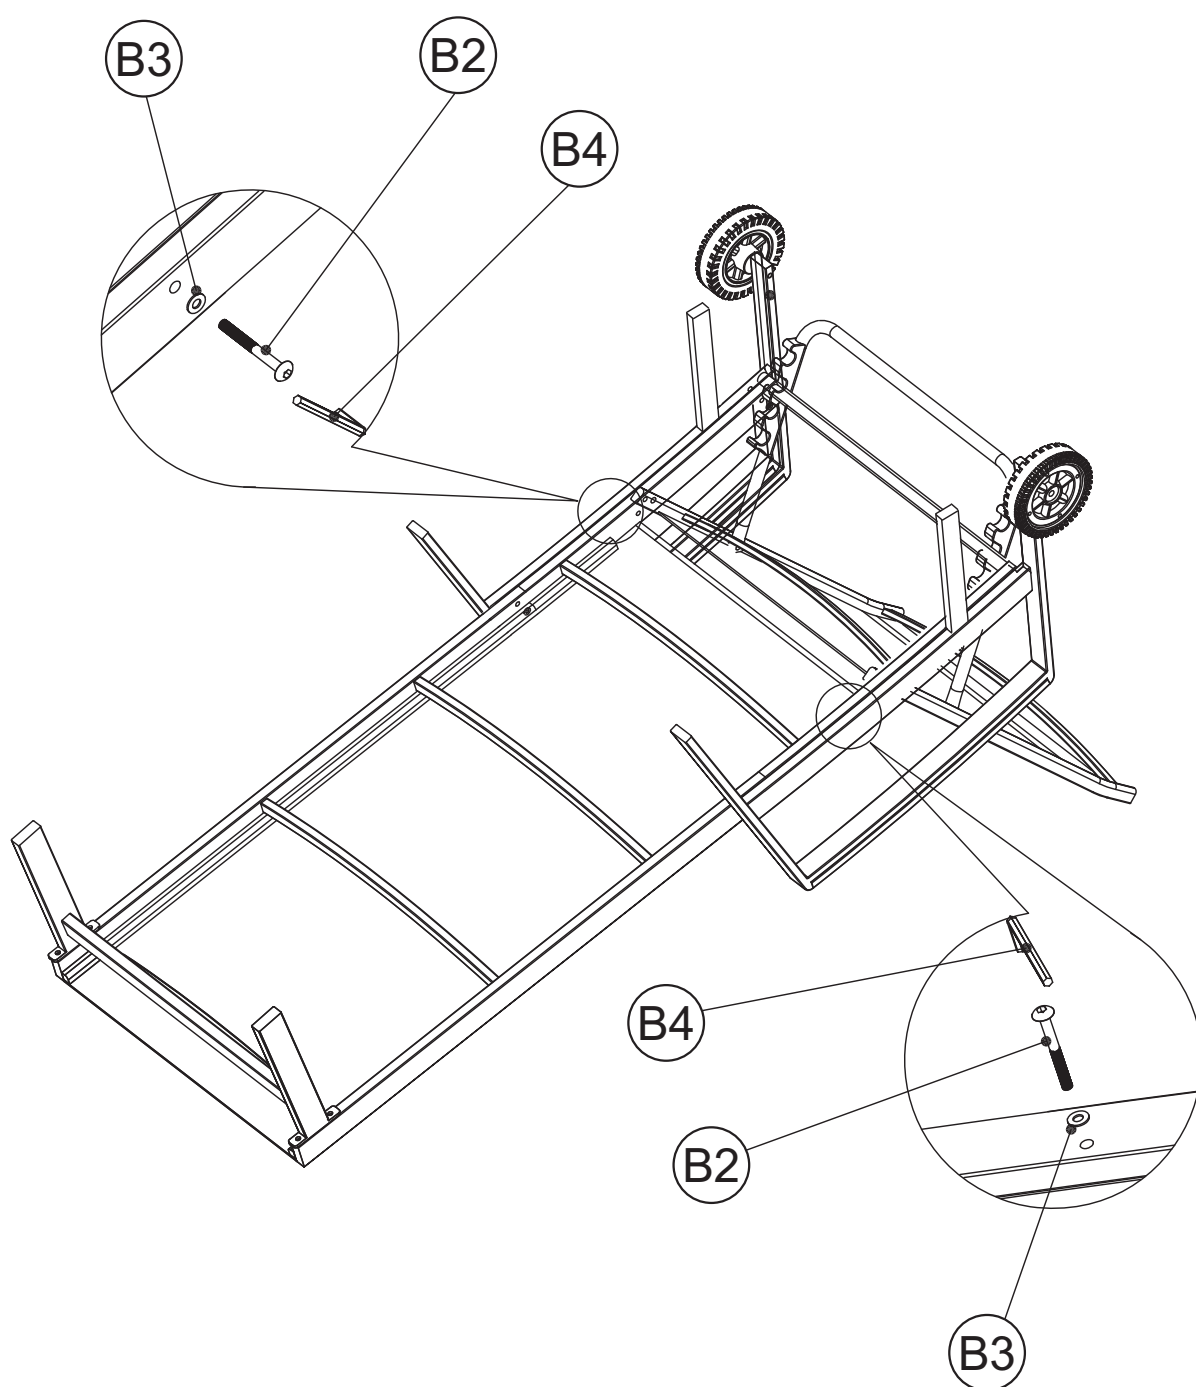

 4mm	 M6X20mm	 Ø 16X1.5mm
1*B4	4*B1	4*B3

